




ELECTRIC HAZARD WARNING

Warning: Isolate supply before removing cover.

- Do not remove Inner Cover while Circuit is operational
- Switch OFF Mains before undertaking any task

WARNING

- 1. Ensure tight connections at all time since loose connections are major reason for false tripping and burnt terminals.
- 2. Recommended to use with earth leakage circuit breaker-RCCB.
- 3. Install DB only in air-circulated area.
- 4. Install DB far from fuel and other sensitive areas.
- 5. Keep away from children's reach and flooding level.
- Make sure all circuit breakers are in OFF position before switching ON main circuit breaker/ isolator/ RCCB and then switch ON each circuit Breaker one by one.

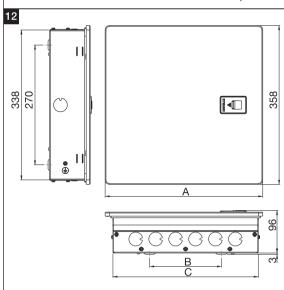

Dimensions (in cm)

No. of Ways	А	В	С	Knockout Holes		
				TOP (Ø 32)	BOTTOM (Ø 32)	SIDE (Ø 32)
4 W ECO	356	162	328	6	6	1
4 W	392	198	364	6	6	1
6 W	428	234	400	8	8	1
8 W	500	306	472	8	8	1
12 W	644	450	616	10	10	1

Diagrams/pictures are for illustrative purpose only.


Havells India Ltd.

Corp Office: QRG Towers, 2D, Sector-126, Expressway, Noida-201 304 (U.P.) Ph. +91-120-4771000, Email: marketing@havells.com, www.havels.com Consumer Care No.: 1800 11 0303 (Tolffree), 011-4166 0303 (Landline), 1800 103 1313 (All Connections)

Copyright Subsists. Imitation of trade dress, graphics and color scheme of this document is a punishable offence.



Instruction Manual

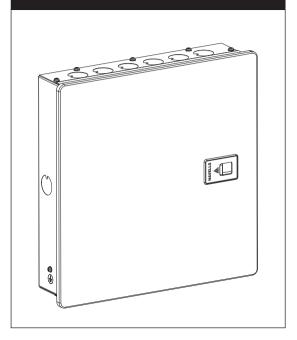

ST-\(\bigcup_\mathbf{x}\) TPN Distribution Board Busbar Rating 100 A

Range: 4 ECO, 4, 6, 8, & 12 Ways



